



Spring Pressure Chart

Watch the Install Video

	PSI	3	4	6	7	9	10	12	13	Base Pressure	14.5	16	17	19	20	22	23	25
	Bar	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1	1.1	1.2	1.3	1.4	1.5	1.6	1.7	
GVW-40																		
Red		x								x	x							
Blue			x							x			x			x	x	x
Green				x					x					x			x	
White					x					x					x	x		x
Brown						x					x					x		
Purple												x	x	x	x		x	x
GVW-45																		
GVW-50																		
Blue		x					x		x		x					x		x
Green			x							x			x	x		x		
White				x				x			x				x			x
Brown					x				x	x	x							
Purple														x	x	x		x
Black												x	x	x	x	x		x
GVW-60																		
Blue								x	x					x				x
Green		x								x					x			
White			x								x					x	x	
Yellow					x				x				x	x	x	x	x	
Purple				x								x						
Aqua Blue						x				x	x	x	x	x	x	x		x

Spring pressures are calculated based on a 1:1 boost/backpressure ratio. Actual intake manifold (boost) pressure can vary