

Required Fan Shroud Modification for Proper Cooler Fitment

Ford MB3Z-8146-C fan shrouds require minor trimming to ensure proper fitment with the Garrett cooler. Failure to remove the highlighted material may prevent the shroud from seating correctly and can interfere with tab engagement.

1. Modify the fan shroud as shown below.

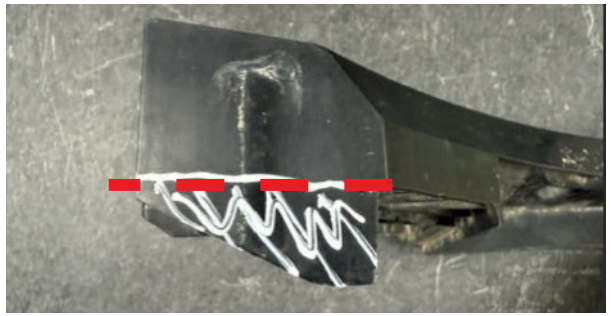

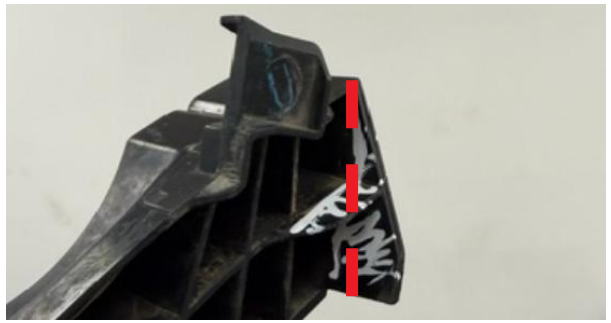


2. Trim the shroud.

Remove the highlighted material from both ends of the shroud to provide the necessary clearance for proper installation of the Garrett cooler.


Using an appropriate cutting tool, carefully remove the marked sections of the shroud.

3. Install the cooler.

Verify that the shroud seats fully against the cooler and that all mounting features properly engage before completing

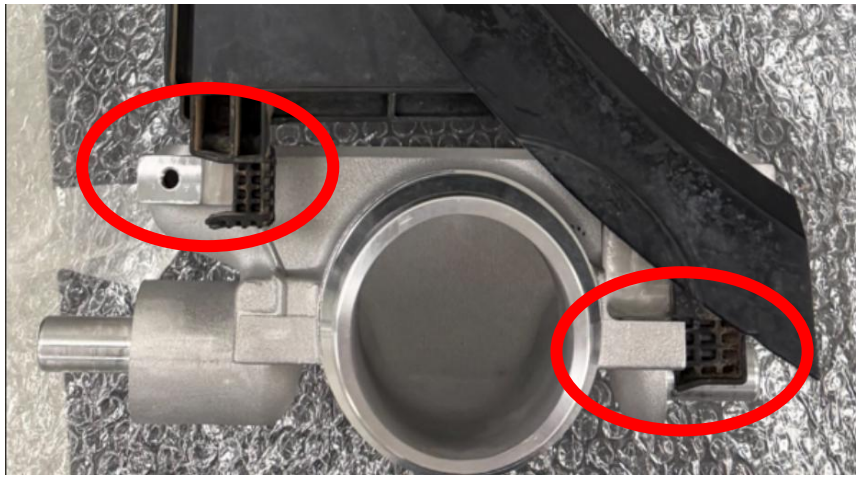

Before Trim:
Shroud does not seat properly on the cooler. Tabs cannot fully engage the slots.

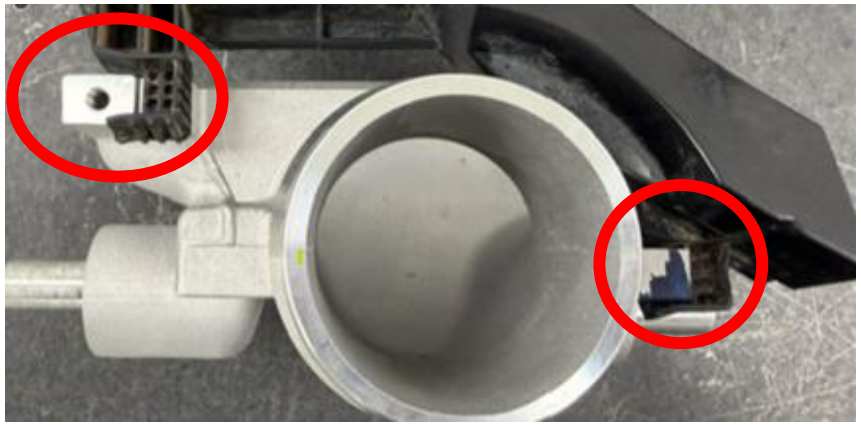

After Trim
Shroud seats correctly on the cooler and tabs fully engage the slots.

© 2026 Garrett Motion Inc.